



1. Commissioning (4)

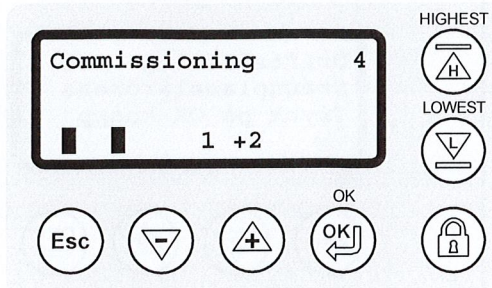


Menu item 4

2. Airbleed (4.1)

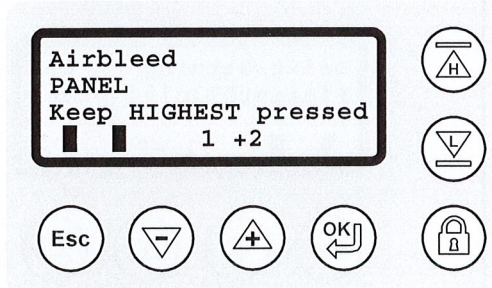


Loosen the airbleed screw
Run until oil is coming.

3. Installation travel (4.2)

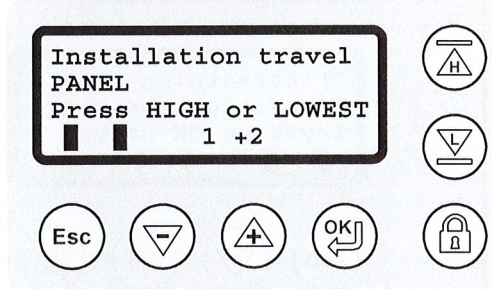


Run by recall handle, or Highest / Lowest
The speed is set in 5.7.1.2 / 5.7.2.2

4. Learn hydraulics (4.3)

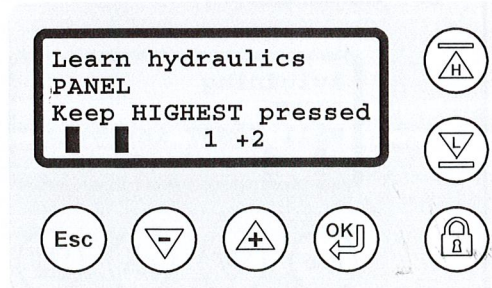


Start from bottom floor, stop when the display shows "up travel finished" then run down.

5. Learn floors (4.4)

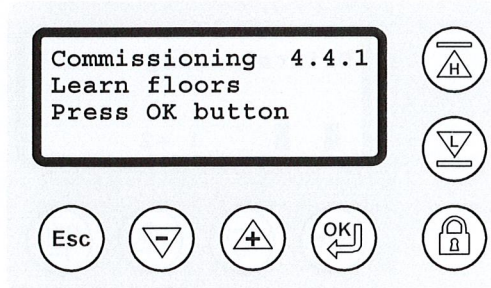


Start at the bottom floor.
Learn travel is done automatically.

6. Fine floor adjustment (4.5)

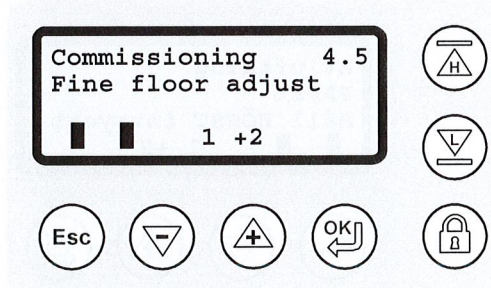


Measure deviation at every floor and make a fine floor adjustment.

7. Rupture valve test(4.6) / Final limit test(4.7)

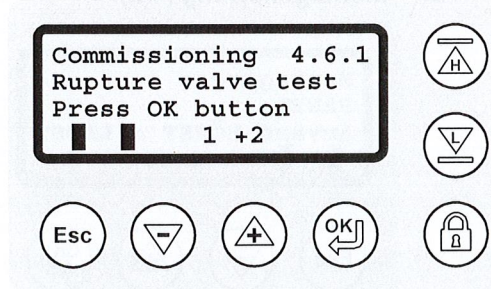

Run the car to the top floor. Display shows:
4.6.1 Rupture valve: Rupture speed
4.7.1 Final limit: Distance to final limit switch

8. Test of running time (4.1)

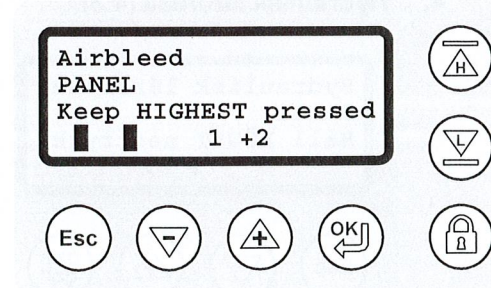

Keep Highest pressed until the motor stops and error code E7 is shown on the display.